# WARNINGS AND CAUTIONS

Important: ALWAYS be sure to disconnect power before re-lamping or wiring the fixture. Read these instructions completely before starting installation.

To avoid the risk of fire and/or shock fixture must be installed in compliance to national and local electrical and building codes.

If an existing fixture is being replaced take special notice of which wires were connected in the outlet box. DO NOT SEPARATE ANY WIRES THAT MAY BE EXISTING IN THE JUNCTION BOX DO NOT DAMAGE THE INSULATION OF JUNCTION BOX WIRES.

In Regular circumstances the BLACK wire will be "live", WHITE will be "neutral" and GREEN or BARE COPPER will be "ground". In older buildings it is always good practice to reconfirm the polarity of the wiring.

# **NOTICE**

. The important safeguards and instructions outlined in this sheet cannot cover all possible conditions and situations that may occur. It must be understood that caution and certain care factors must be followed. These instructions are provided for your safety and we highly recommend that a licensed, trained electrician install this unit.

# ASSEMBLY INSTRUCTIONS

### Step 1

Remove fixture from its original package.

### Step 2

Separate mounting plate (1c) from canopy (2a) by loosening the mounting collar

# Important: This fixture must be mounted independently from junction box, additional means of support is required.

# Step 3

Determine hanging height of fixture by selecting from chain supplied (2d). Remove any unwanted length by opening the last link with chain pliers and install the top quick link (4b) to the beginning end of the chain and bottom quick link (2e) to the bottom end of the chain, after weaving fixture wires through chain and secure top quick link (4b) to the screw collar (1e) and fixture hub (3a).

### Step 4

Secure suspension rods (3c) to fixture hub (3a) and fixture body (3b) with screws

# Step 5

Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts (1b) provided in hardware package.


# Step 6

Attach canopy (2a) to mounting plate (1c) by threading mounting collar nut (2f) onto screw collar (1e).

# Step 7

Attach fixture shade (3f) to fixture socket (3h) with socket ring (3g) and secure with socket wrench tool (3e)(See Illustration 1). Install recommended lamps (4a) (not provided) (referred on the socket label for maximum wattage and type) to fixture sockets (3h).

You are now ready to enjoy your fixture.

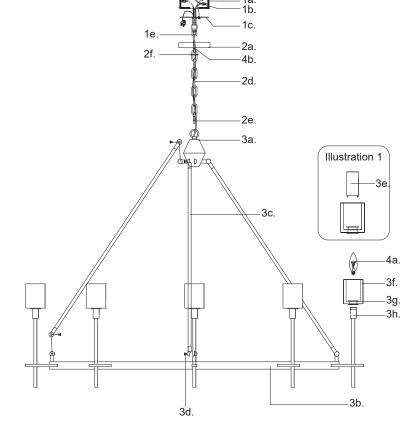



P. 1.855.855.8926

CANADA:19054 28th Ave., - Surrey, BC V3Z 6M3

USA: 3035 E. Lone Mountain Rd - Las Vegas, NV, 89081

www.aloralighting.com